

Roootz Dry Iron



 **CAUTION HOT SOLEPLATE**
REMOVE FROM SOCKET AFTER USE

 **AUTO-OFF**
30 SEC

 **AUTO-OFF**
8 MIN

 **NON-STICK**
SOLEPLATE

 **eco**



AUTO-OFF
30 SEC



AUTO-OFF
8 MIN



NON-STICK
SOLEPLATE



AC220-240V | 50-60Hz | 1000W

2
YEAR
WARRANTY

Please read this instruction manual carefully and familiarize yourself with your new iron. Before using the first time, please retain this manual for future reference.

SPECIFICATIONS

Functions: Dry, Auto-shut-off

Rated parameter: 1000W, AC220-240V, 50-60Hz

Type of Fabric: Nylon, Silk, Wool, Cotton, Linen

DEVICE DESCRIPTION

1. Temperature Control Dial
2. Power Indicator Light
3. Auto Shut-Off Light
4. NON-STICK Soleplate



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Always keep the iron out of the reach of children. Close adult supervision is necessary when the iron is used by or near children.
- Burns can occur from touching hot metal parts. The iron will be of high temperature when used; never touch it with your hand or close to the flammable product in order to avoid accidents.
- Unplug the iron from the mains electrical supply:
 - before cleaning;
 - immediately after use;
 - while it is being repaired.
- Do not relocate or store the iron while it is operating or while it is connected to the mains electrical supply.
- The iron base must not be submerged in water, as any contact with water will cause a malfunction and/or an electric shock. Do not use the appliance with wet hands.
- To prevent the risk of electrical shock, never immerse the power cord, plug or any non-removable parts of this iron in water or any other liquid.
- The iron is not to be used if it has been dropped, or if there are visible signs of damage.
- Do not operate the iron if the plug or power cord have been damaged, or if it is not working properly.
- Never use the iron if it is damaged in any way.
- Check the power cord regularly for damage. If the power cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid an electrical hazard.
- All repairs should be done by any of our special repair agents. Improper repairs may place the user at risk.

! SAFETY INSTRUCTIONS

Please read through the following safety precautions carefully before switching on the iron. Keep this instruction manual in a safe place for future reference. Failure to follow all the instructions listed may result in electric shock, fire, or serious personal injury.

- Before using the iron for the first time, check that the voltage and power supply comply with the specifications indicated on the rating plate of the appliance.
- The iron is not intended for use for by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Use an earthed wall socket; the power cord and plug must be dry.
- Unfold the AC cord completely before using it.
- In order to prevent overriding the circuit load, please don't use other appliances with high power at the same time.
- If it is necessary to connect with several appliances with high power at the same time, please use the cord with 10A, otherwise, the cord with less than 10A will be too heated.
- To unplug the iron, grasp the plug firmly and remove it from the mains electrical supply. **DO NOT PULL ON THE CORD.**
- Do not leave the iron unattended when in use or when connected to the mains electrical supply.
- Always place the iron on a stable, flat, heat-resistant surface. Ensure that the surface can take the weight of the unit during use, and also when the iron is resting on its stand.
- Do not allow the power cord to hang over sharp table edges or come into contact with hot surfaces.
- Do not use the iron outdoors.
- Always switch the power OFF before removing the plug from the mains electrical supply.

USING THE DRY IRON

BEFORE FIRST USE

1. Before using the iron for the first time, check that the voltage and power supply comply with the specifications indicated on the rating plate of the appliance.
2. It is normal for a small amount of smoke to be produced the first time the iron is used. This will disappear quickly.
3. Remove any sticker or protective foil from the Soleplate [4]. Clean the Soleplate with a soft cloth.
4. Keep the Soleplate smooth: avoid hard contact with metal objects (such as clothes rack, button, and slide fastener).
5. To iron pure woolen fabrics (100% wool), you will need to use a low heat setting, and use a dry pressing cloth.

DRY IRONING

1. Please classify the clothes as per its washing label to know the correct temperature position before ironing.
2. The clothes (such as synthetic fabric and silk) with lower ironing temperature shall be ironed firstly, and then iron the clothes (such as wool, cotton and linen etc.) with higher temperature.
3. Stand the iron on its end, set the Temperature Control Dial [1] to the "MIN" position.
4. Plug the iron in the socket. The appliance has been powered on when the Power Indicator Light [2] is on.
5. Set the Temperature Control Dial [1] to the correct temperature. Start ironing after the Indicator Light [2] goes out.

AUTOMATIC SAFETY SHUT-OFF

When the iron is plugged in, the Power Indicator Light [2] will light steadily, indicating that the heating element is switched on.

IF YOU LEAVE THE IRON

- in a horizontal position without moving it, or accidentally tip the iron over, it will automatically stop heating after 30 seconds. The Auto Shut-Off Light [3] will blink to let you know that the iron has stopped heating.
- in a vertical position (on its heel rest) without moving it, the iron will automatically turn off after 8 minutes. The Auto Shut-Off Light will blink to let you know that the iron has stopped heating.

Note

The Auto Shut-Off Light will continue to blink until the iron is unplugged or reset.






To reset the iron: Move the iron back and forth. The Auto-off Indicator Light will stop blinking and the iron will start heating again.

Warning

The Auto Shut-Off function is a safety feature, not a recommended way for turning your iron off.

SETTING THE TEMPERATURE

Follow the ironing instructions on the garment label. However, if there are no instructions but you know the type of fabric, please consult the following guidelines:

 NOTE: This symbol means that the fabric should not be ironed.		
Instructions on label	Type of fabric	Temperature setting
	Nylon Silk	MIN  MAX
	Wool	
	Cotton Linen	

! Note

If the garment consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

CLEANING AND MAINTENANCE

1. Before cleaning, remove the plug from the socket and allow the iron to cool down sufficiently.
2. Wipe off the Soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
3. If the fiber adheres to the Soleplate, use a damp cloth with vinegar to wipe off the Soleplate.
4. Never use strong acid or alkali in order to avoid damaging the Soleplate.
5. Stand the iron on its end and let it cool down sufficiently and set the Temperature Control Dial to position "MIN".

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to do as follows:

1. Remove the plug from the mains socket and allow the iron to cool down completely before storing.
2. Clean the Soleplate with a dry cloth as traces of moisture could mark it.

CORRECT DISPOSAL OF THIS PRODUCT



For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point. Observe the local regulations for material disposal. If you have any questions, please contact the local authorities responsible for waste disposal.

TROUBLESHOOTING

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, please contact the company where the product was purchased.

Problem	Possible Cause	Possible Solution
Not enough heat or much heat.	The iron is unplugged from the mains electrical supply.	Check if the plug is connected to the mains electrical supply.
	The Temperature Control Dial has not been rotated from "MIN" position.	Check if the Temperature Control Dial is in the correct position.
	The Temperature Control dial has not been rotated to desired setting.	Check if the Temperature Control Dial is in the correct position.

! Note

Any change made to the product, no obligations to inform you separately.